


Spare Parts Catalog

S 6-36

Material number: 1290.052.182

Plant: 032.01.01-1 GEARBOX HOUSING S 6-36 / GEARBOX HOUSING



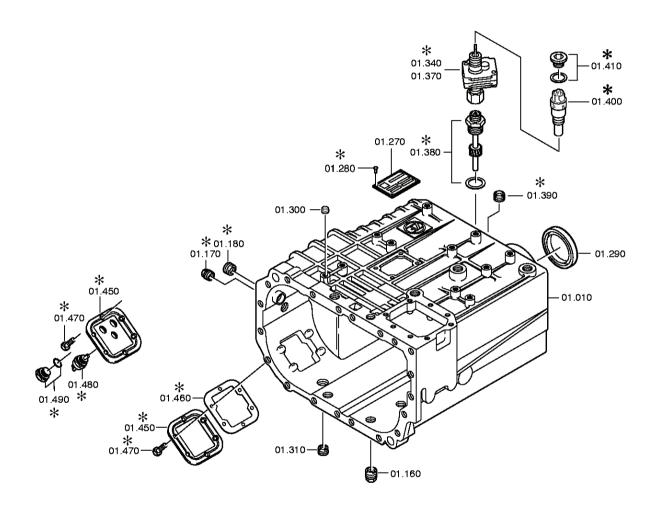


Plant: 032.01.80-1

GEARBOX HOUSING

S 6-36 /


GEARBOX HOUSING



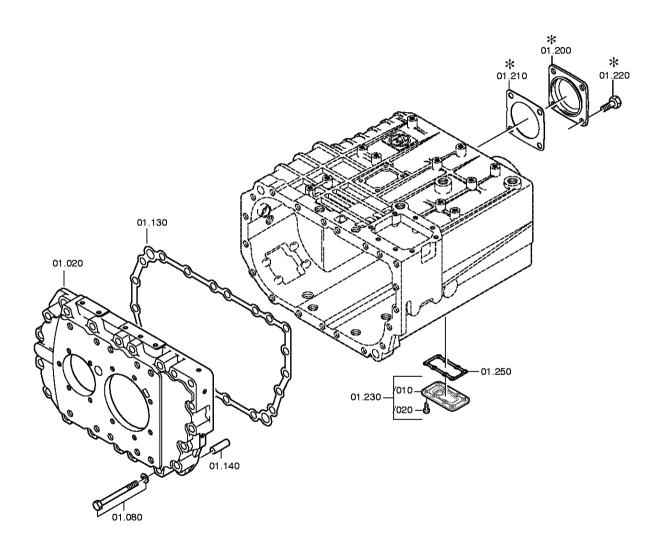


Plant: 032.02.01-1 INPUT SHAFT S 6-36 / CONNPLATE



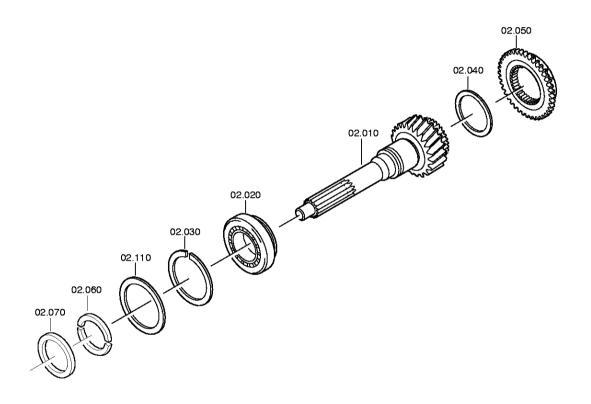


Plant: 032.02.40-1 INPUT SHAFT S 6-36 / CONNPLATE



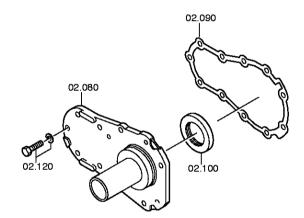


Plant: 032.03.01-1 LAYSHAFT S 6-36 / LAYSHAFT



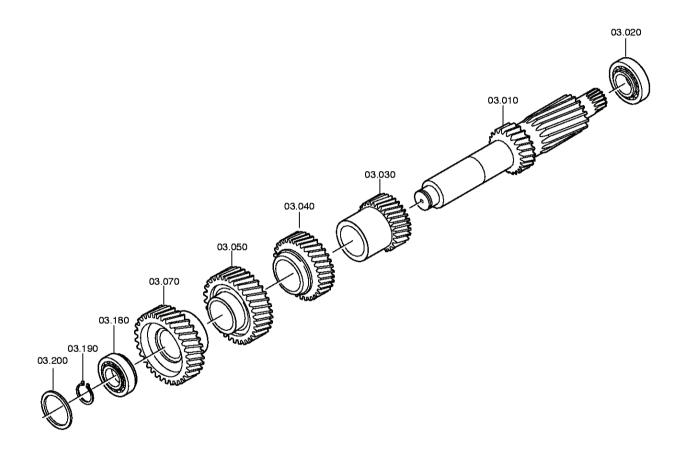


Plant: 032.04.01-1 MAIN SHAFT S 6-36 / MAIN SHAFT



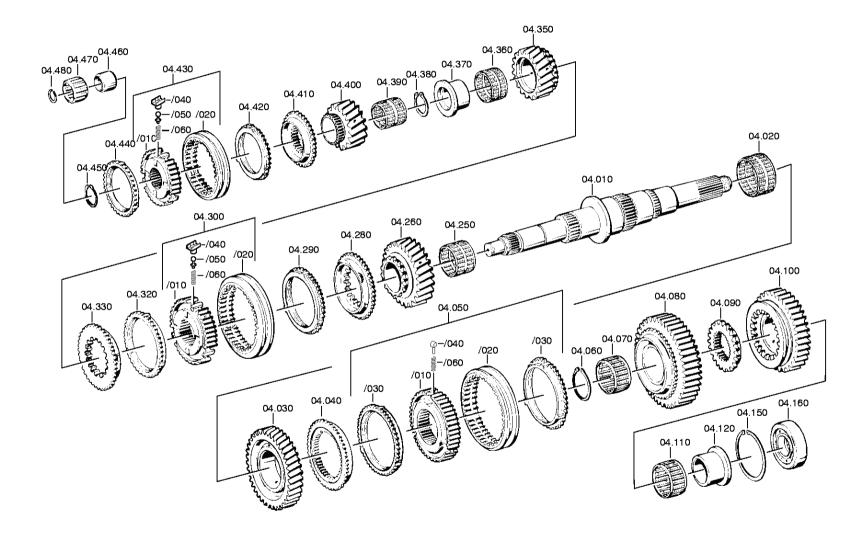


Plant: 032.04.80-1 MAIN SHAFT S 6-36 / MAIN SHAFT



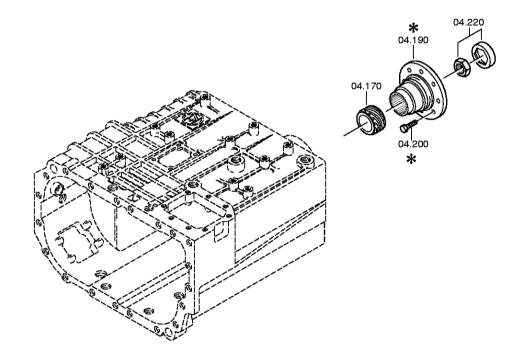


Material number: 1290.052.182 S 6-36 /
Plant: 032.05.01-1 RETURN
Material-assembly-group-no: 1290.105.017



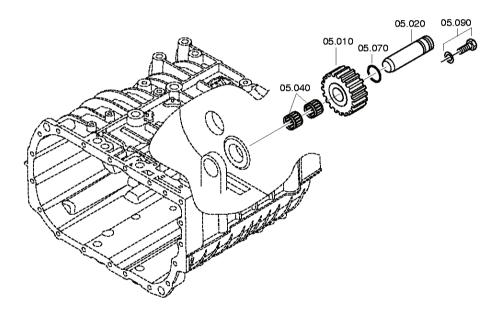

Plant: 032.06.01-1 GEAR SHIFT SYSTEM S 6-36 / GEAR SHIFT SYSTEM



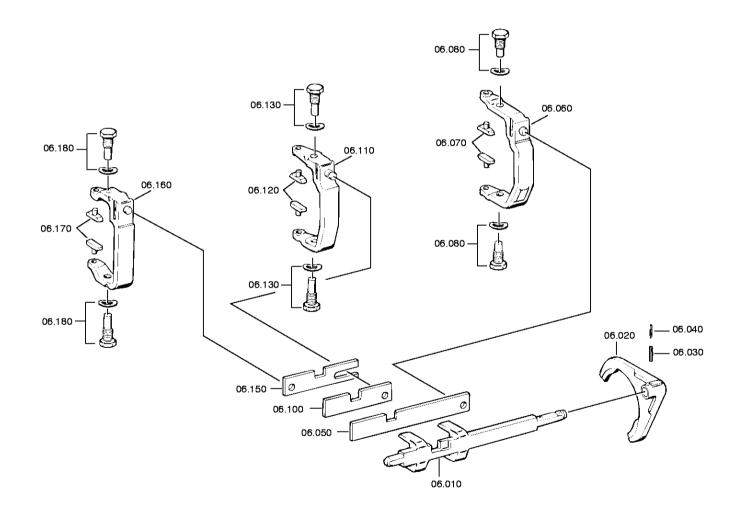


Plant: 032.06.40-1

GEAR SHIFT SYSTEM

S 6-36 /

GEAR SHIFT SYSTEM



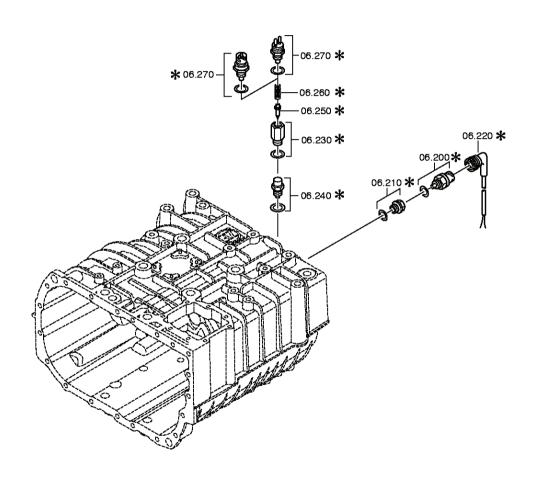

Plant Page 1 from 1

Material number: 1290.052.182

Plant: 032.07.04-1 **GEAR SHIFT HOUSING** S 6-36 /

GEAR SHIFT HOUSING



Bildtafel:

Figure: 032.07.04

je nach Stücklistenausführung depending on spec. number suivant la nomenclature secondo la distina base

